




torri a quattro facce, per serraggi multipli

four faces towers
tours à quatre faces
vier-gesichte Spannturm

06

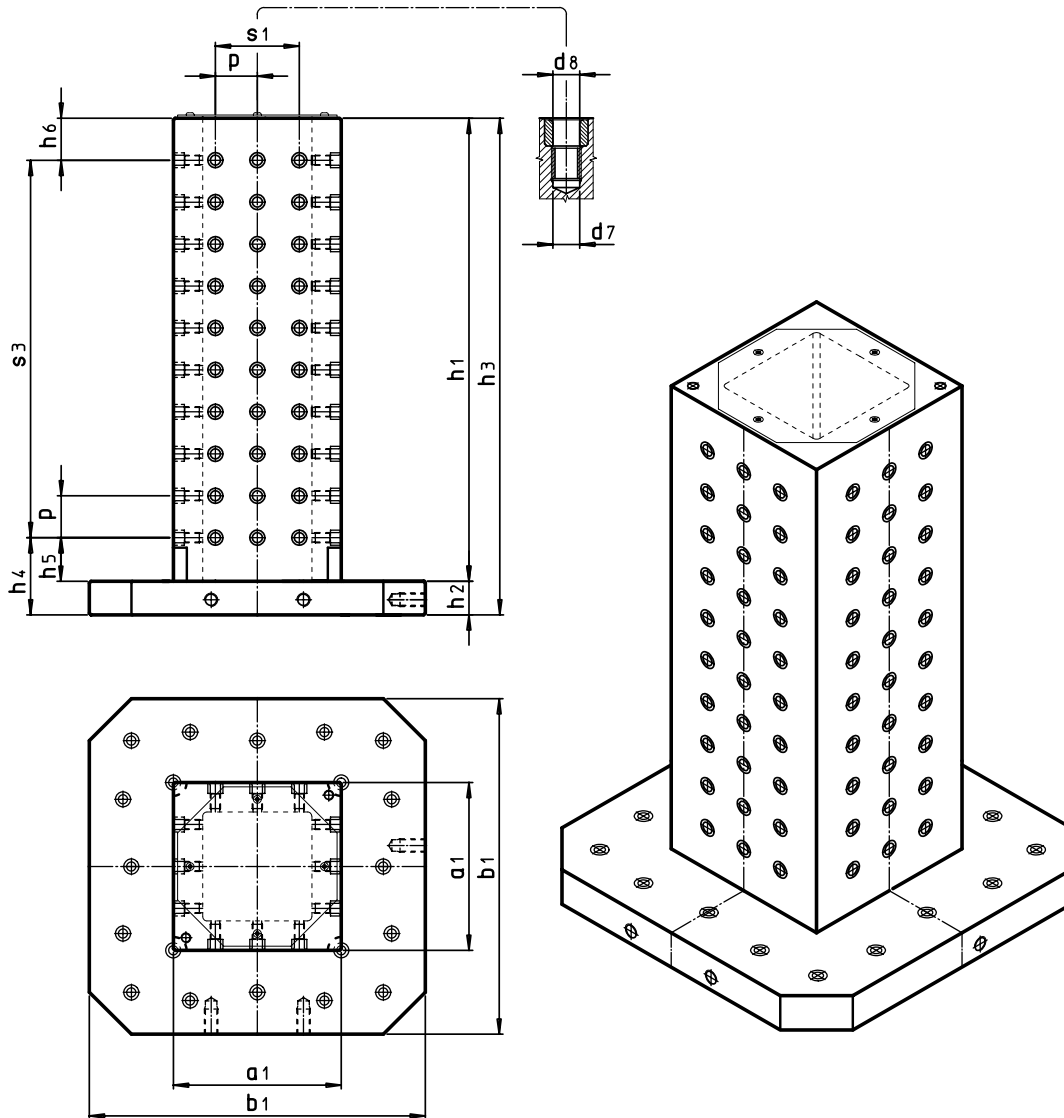

| codice-code | a1 | h1 | h2 | h3 | b1 | d8 | d7 | h4 | p | s1 | s3 | h5 | h6 | guide - rails | .GG | .AL |
|----------------|--------|-----|----|-----|--------|-----------|------------|--------|-------|-----|-----|----|----|-----------------|-----|-----|
| code-Best.nr. | ±0.015 | | | | stand. | F7 | | ±0.015 | ±0.01 | | | | | rail - Schienen | kg | kg |
| 060.210 | 200 | 602 | 40 | 642 | 400 | 12 | M12 | 92 | 50 | 100 | 500 | 52 | 50 | l=600 max | 105 | 40 |
| 060.220 | 200 | 602 | 40 | 642 | 500 | 12 | M12 | 92 | 50 | 100 | 500 | 52 | 50 | l=600 max | 130 | 45 |

indicare con la richiesta le caratteristiche di interfacciamento alla macchina - on the request put the interface features to the machine
il faut indiquer dans votre demande les caractéristiques d'interface à la machine - bei Anfrage bitte Info über die Palettenschnittstelle